

## Quick Start Guide



## *GlobalViewer™ for Pocket PC*

IP Link Software

# EXTRON® ELECTRONICS END USER LICENSE AGREEMENT

Carefully read the following agreement. This End User License Agreement is a legal agreement between the End user and Extron. THE END USER AGREES TO BE BOUND BY THE TERMS AND CONDITIONS OF THIS AGREEMENT BY INSTALLING, COPYING, OR OTHERWISE USING THE SOFTWARE. IF THE END USER DOES NOT AGREE, DO NOT INSTALL, COPY, OR USE THE SOFTWARE.

Note: If the End User does not own the product for which this Software is intended, the End User is not authorized to install, copy, or otherwise use the software.

## DEFINITIONS

Throughout this entire Agreement:

"Extron" shall indicate RGB Systems, Inc., DBA Extron® Electronics.

"Software" shall indicate the programs and documentation that were provided with this agreement or made available from Extron's Web site.

"End User" shall indicate the individual person or a single legal entity that acquires, installs, uses or intends to use this Software.

## TERMS OF LICENSE

Under the terms of this Agreement, Extron grants the End User a limited license to use this Software for the purposes outlined therein. Extron retains ownership of the software and reserves all rights unless otherwise noted in this Agreement. This Software is not for resale and may not be repackaged, transferred or redistributed to any third party without the expressed written consent of Extron.

Provided the End User complies with all terms and conditions of this Agreement, this Agreement grants the End User the following rights:

Installation and use - The End User may install and use a copy of the Software in accordance with this Agreement.

License Grant for Templates and Collateral Media - The Software may include document and application templates as well as collateral media (images, clip-art, drawings, sound files, etc.). The End User may copy and modify these materials for the End User's own personal or professional use.

License Grant for Documentation - The documentation that accompanies this Software is licensed for internal, non-commercial reference purposes only.

Furthermore, the End User agrees not to modify or disassemble the Software, in whole or in part, except as expressly provided for in this Agreement or upon Extron's prior written approval.

## NO WARRANTY

THIS SOFTWARE IS PROVIDED "AS IS" AND IS NOT WARRANTED IN ANY WAY. EXTRON DOES NOT WARRANT THAT THE SOFTWARE WILL MEET THE END USER'S REQUIREMENTS OR THAT THE SOFTWARE WILL OPERATE FREE OF ERRORS. EXTRON DISCLAIMS AND EXCLUDES ALL WARRANTIES, EXPRESSED OR IMPLIED, WITH RESPECT TO THIS SOFTWARE INCLUDING, BUT NOT LIMITED TO: ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN THE UNIFORM COMMERCIAL CODE AND/OR ANY OTHER COMPARABLE STATE STATUTE.

## COPYRIGHT

Extron reserves all rights not expressly granted to the End User in this Agreement. The Software is protected by copyright and other intellectual property laws and treaties. Extron owns the title, copyright and other intellectual property rights to this Software unless otherwise noted. This software is licensed, not sold. This Agreement does not grant the End User any rights to trademarks or service marks belonging to Extron.

## LIMITATION OF LIABILITY

EXTRON WILL NOT BE LIABLE, AND THE END USER WILL HAVE NO REMEDY FOR DAMAGES FOR ANY CLAIM, CONCERNING THE USE OF THE SOFTWARE. UNDER NO CIRCUMSTANCES WILL EXTRON BE LIABLE FOR ANY INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES INCLUDING BUT NOT LIMITED TO: COMPENSATION, REIMBURSEMENT, OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS, LOSS OF DATA, CONFIDENTIAL OR OTHER INFORMATION, OR FOR ANY OTHER REASON WHATSOEVER.

## MISCELLANEOUS

The End User agrees that Extron may collect and use technical information gathered as part of the product support services provided to the End User, if any, related to the Software. Extron may use this information solely to improve our products or to provide customized services or technologies to the End User and will not disclose this information in a form that personally identifies the End User.

This Agreement applies to updates, supplements, and add-on components of the Software that Extron may provide to the End User or make available to the End User after the date the End User obtains his or her initial copy of the Software, unless they are accompanied by separate terms.

Without prejudice or other rights, Extron may terminate this Agreement if the End User fails to comply with the terms and conditions of this Agreement. In such event, the End User must destroy all copies of the Software and all of its component parts.

If this software was obtained in the United States, this Agreement is governed by the laws of the State of California. Software obtained outside of the United States is subject to local law.

# GlobalViewer for Pocket PC Quick Start

---

## Introduction

GlobalViewer™ for Pocket PC™ (GVPPC) software brings the power of the GlobalViewer Web Management application (GlobalViewer Web) to your handheld Pocket PC. It allows remote control, diagnostic assessment, and troubleshooting of any system configured by Global Configurator 2.1 (or later).

This quick start guide provides instructions for installing the GVPPC software onto your Pocket PC and basic start up instructions. It assumes you have familiarity with GlobalViewer Web. For more information on GlobalViewer Web, go to [www.extron.com](http://www.extron.com) and type the keyword “Global Viewer” into the **Search** text box.

### Minimum requirements for GlobalViewer for Pocket PC

- Windows Mobile 2003 or later
- TCP/IP access to the IP Link devices of the Global Configurator system
- .Net Compact Framework (please visit [www.extron.com](http://www.extron.com) to check requirements for your system)
- 64 MB memory (minimum)
- ActiveSync software (available from the Microsoft Web site)

### GlobalViewer for Pocket PC Features

- Location view of your Global Configurator 2.1 (or later) system
- Control of devices on the Roomview page

### Current feature limitations of GlobalViewer for Pocket PC

- Does not display Device Type Summary screen
- Does not support using a proxy server to connect to the Internet

## Downloading GlobalViewer for Pocket PC to Your PC Desktop

### *Step 1*

#### Download the installer.


1. Go to the Extron Web site at [www.extron.com](http://www.extron.com) and do the following:
  - a. Click the Products tab.
  - b. Click the IP Link icon or link.
  - c. Click the Software icon.
  - d. Click the GlobalViewer™ for Pocket PC™ icon.
2. Download the **GlobalViewer for Pocket PC** installer.
3. Double-click the Installer icon to run the installer.

---

## Step 2

### Connect your Pocket PC to your PC.

Follow the instructions for your Pocket PC and ActiveSync software to ensure that your PDA and PC are both active and communicating. When successfully connected, the status is confirmed, as shown below.

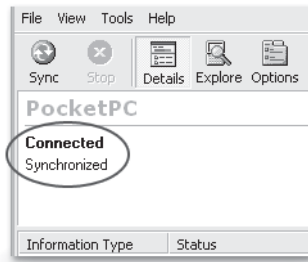

## Installing GlobalViewer for Pocket PC

To install GlobalViewer onto your Pocket PC, use ActiveSync software. For an explanation of how to use this software, see the following instructions.

### Installation using ActiveSync software

#### Step 1

##### Download the .CAB files from your PC to your Pocket PC.

1. From your PC, click the Explore button (shown below) in ActiveSync to open the Mobile Device window.



2. Double-click the My Pocket PC folder.
3. Drag the **GVPPC\_PPC\_ARMV4.CAB** file from your PC folder (C:\Program Files\Extron\GlobalViewer for Pocket PC) into the My Pocket PC system folder.
4. Drag the appropriate .CAB file from your PC into the **My Pocket PC** folder, depending on your **Windows Mobile** version.
  - For the **Windows Mobile 2003** operating system, open the Windows Mobile 2003 folder and drag the **NETCFv2.ppc.armv4.cab** into the My Pocket PC system folder.
  - For the **Windows Mobile 2005** operating system, open the Windows Mobile 2005 folder and drag the **NETCFv2.wm.armv4i.cab** into the My Pocket PC system folder.


# GlobalViewer for Pocket PC Quick Start

---

## Step 2

Install GlobalViewer for Pocket PC.

1. From the Start drop-down menu of your Pocket PC, select Programs.
2. Tap the File Explorer icon.
3. Scroll to and select the My Device folder, as shown below.

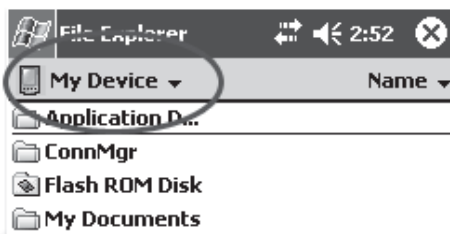


4. Tap the appropriate NETCFv2.CAB file, depending on your Windows Mobile version.
5. Tap the GVPPC\_PPC\_ARMV4.CAB file.  
The installation process is complete.

## Running GlobalViewer for Pocket PC

### Step 1

Run the program.


1. From the Start drop-down menu of your Pocket PC, select Programs.
2. Tap the GVPPC program icon.  GlobalViewer

The GlobalViewer Login page appears, as shown below.




## Step 2

### Enter Login information.

1. Tap inside the Hostname/IP Address field to enter the host name or IP address. The Pocket PC keyboard, shown below, appears automatically to assist in entering the value. 
2. If a password has been set on the accessed IP Link device, click inside the Admin. Password field to enter the administrator password.
3. To enter the Telnet port value, click inside the Telnet Port field and type in a port number. The default port number is 23.
4. Tap the Connect button.

The GVPPC Tree View page (which displays devices by location) appears as shown below.

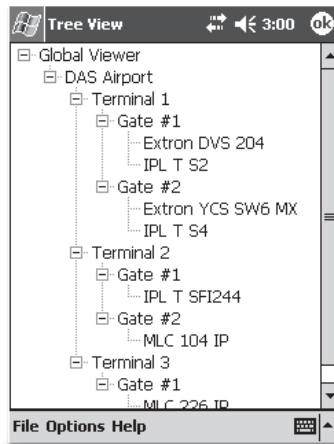


## Step 3

### Access a device.

1. From the Tree View shown in step 2 above, click a displayed device.

Depending on the product, an information page or control page appears. The example below shows an Extron DVS 204 video scaler.

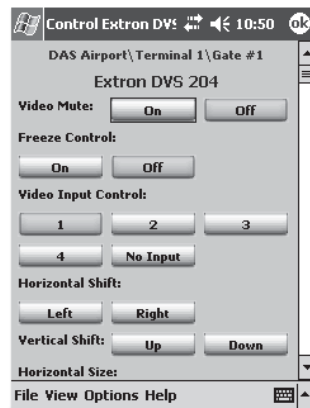

2. Use your Pocket PC to access information and/or control the device.

# GlobalViewer for Pocket PC Quick Start


---

## Finding the Current GVPPC Version

To learn the current version of GVPPC running on your Pocket PC, do the following:

1. Tap the Help menu at the bottom of the screen (circled below).
2. Select About GVPPC.

The version number and copyright information appear on the screen.

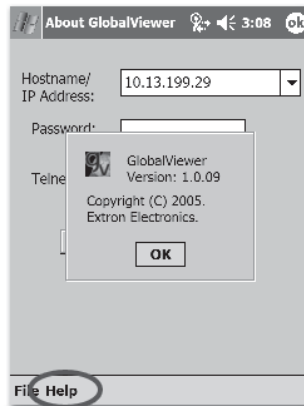

**Extron Electronics, USA**  
1230 South Lewis Street  
Anaheim, CA 92805  
USA  
714.491.1500  
Fax 714.491.1517

**Extron Electronics, Europe**  
Beeldschermweg 6C  
3821 AH Amersfoort  
The Netherlands  
+31.33.453.4040  
Fax +31.33.453.4050

**Extron Electronics, Asia**  
135 Joo Seng Road, #04-01  
PM Industrial Building  
Singapore 368363  
+65.6383.4400  
Fax +65.6383.4664

**Extron Electronics, Japan**  
Kyodo Building  
16 Ichibancho  
Chiyoda-ku, Tokyo 102-0082 Japan  
+81.3.3511.7655  
Fax +81.3.3511.7656