
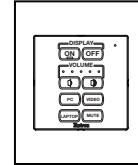



UCM 100 EU AAP Removal Procedure for MLC 62 EU

The UCM 100 EU AAP wallplate enables an MLC 62 EU controller to be mounted in a quadruple space architectural adapter plate (AAP) frame in areas of limited space. The controller can be mounted either horizontally or vertically within the UCM 100 frame to fit the available mounting space (see the illustrations at right).

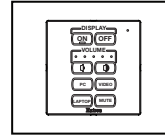


If it becomes necessary to remove the controller from the UCM 100 following installation, follow these steps:

1. Remove the UCM 100 with the controller from the AAP plate.
2. From the rear of the unit, pinch the two tabs on the opposite sides of the controller inward.
3. While continuing to hold in the tabs, slide the controller out through the front of the frame.

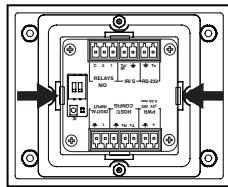

Push Tabs
to Release

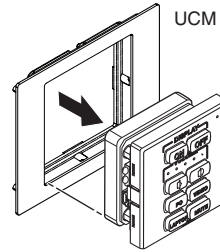

UCM 100 EU AAP

MLC 62 RS EU